





FRONT



BACK

**Instrucciones de instalación / Installation instructions**


Toallero barral recto / Towel bar

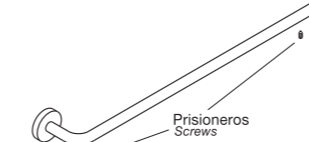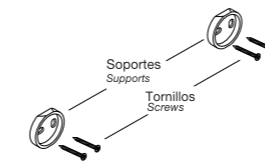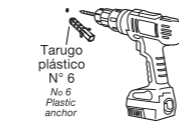

- 1 **Marque** la distancia entre ambos soportes verificando su horizontalidad.  
**Mark the distance between both supports before you start. Make sure the holes are at the same height.**
- 2 **Perfore** con una mecha Ø 6 mm.  
**Drill the holes using the drill bit for Ø 6 mm anchor.**
- 3 **Fije** los soportes con un destornillador.  
**Fix the supports with a screwdriver.**
- 4 **Ajuste** el accesorio sobre los soportes, como muestra el dibujo.  
**Mount the accessory on the supports as shown in the picture.**

Centro de atención al usuario FV responde E-mail: fvresponde@fvsa.com/Web: www.fvsa.com

FV S.A. se reserva el derecho de introducir mejoras y/o modificaciones de diseño según convenga, sin previo aviso.  
FV S.A. reserves the right to improve and/or make revisions in the designs of faucets and bathroom accessories or packaging without previous notice.  
FOLL-Z164-G1 / Edición Nº1 / Abril 2016

Modification	New	<input checked="" type="checkbox"/>							Name: D.Villafañe		
Description:											
Direct modification		<input type="checkbox"/>	Observations:								
Predicted modification		<input type="checkbox"/>									
Other modification		<input type="checkbox"/>									
Nº	Modifications	Date	Name		Nº	Modifications	Date	Name			
Specifications				Date	Name	Tolerance					
Paper	70-80 grs.	06/07/2016	Villafañe	± 1 mm							
Print	1 color: BLACK - FRONT/BACK										
Measurements	105 x 105 mm (Draw Esc. 1:1)	Denomination			Code		Edition				
				<b>BOOKLET</b>			<b>FOLL-Z164-G1</b>				